

Side Wall with Door and Window

3-in-1 wall for BRIMO pop-up tents: solid wall, wall with door or wall with window



Door and window open

A 100% waterproof side wall that closes one side of your pop-up tent without gaps. The 1.2 m wide door and the PVC window are built in – when you do not use them, the wall stays completely solid.

Widths	2 m · 3 m · 4 m · 4.5 m · 6 m · 8 m (2 × 4 m)
Fits tents	2x2, 2x3/3x3, 4x4, 3x4.5, 3x6, 4x6, 4x8 m
Door	1.2 m wide, zip opening, rolls up
Window	PVC, can be covered with a fabric flap
Fastening	Velcro along the whole edge

Package contents

- 1 side wall with door and window (the 8 m version consists of 2 walls of 4 m)


Installation and use

- 1 Prepare the tent**
 Open the tent completely, lock the frame and set the legs to the working height. Anchor the tent before you add any wall.
- 2 Attach the top edge**
 Start in one corner. Press the Velcro strip on the top edge of the wall onto the Velcro on the inside of the roof valance and continue along the whole length of the side.
- 3 Attach the side edges**
 Wrap the Velcro straps on both side edges around the tent legs and press them firmly together, from top to bottom.
- 4 Use the door**
 Open both zips of the door and roll the middle part upwards. Fasten it in the rolled position. Close the zips completely when the door is not in use.
- 5 Use the window**
 Remove the fabric cover from the Velcro to uncover the PVC window. Attach the cover again to get a fully solid wall.

Note: The wall is universal for several tent types, so the colour shade and the height or width of the Velcro may slightly differ from your tent.



Window with the cover removed

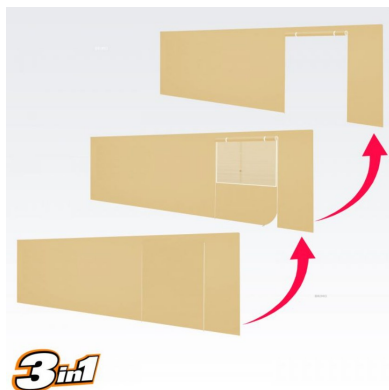

3 in 1: solid wall · window · door

Safety instructions

For this product

- Walls make the tent much more exposed to wind. With walls installed, always anchor every leg with weights and, where possible, with pegs and ropes.
- Remove the walls (or open the door) when the wind gets stronger, and take the whole tent down before a storm.
- Do not pull or hang on the wall or the door – the Velcro is not designed to carry loads.

General

- Always anchor the tent properly (weights, sand or water bags, pegs or ropes) before use.
- Take the tent and its accessories down before strong wind, storm, heavy rain, snow or hail. Never leave them installed unattended or overnight in bad weather.
- Never let rain water collect on the roof or any fabric part – remove accumulated water immediately and keep all fabric fully tensioned so water runs off.
- Keep children away during installation and do not let them play with the parts.
- Check all parts before every use and replace damaged parts. Use only original BRIMO parts.

Care and storage

- Clean with water and a soft brush or cloth with mild soap. Do not use solvents or a high-pressure washer.
- Let the wall dry completely before packing to prevent mould and smell.
- Roll the window part rather than folding it sharply, especially in cold weather – PVC may crack.

The manufacturer is not liable for damage caused by wind, rain, snow, accumulated water, insufficient anchoring or by not following these instructions.